


PhoneEasy® 115


English



doro 

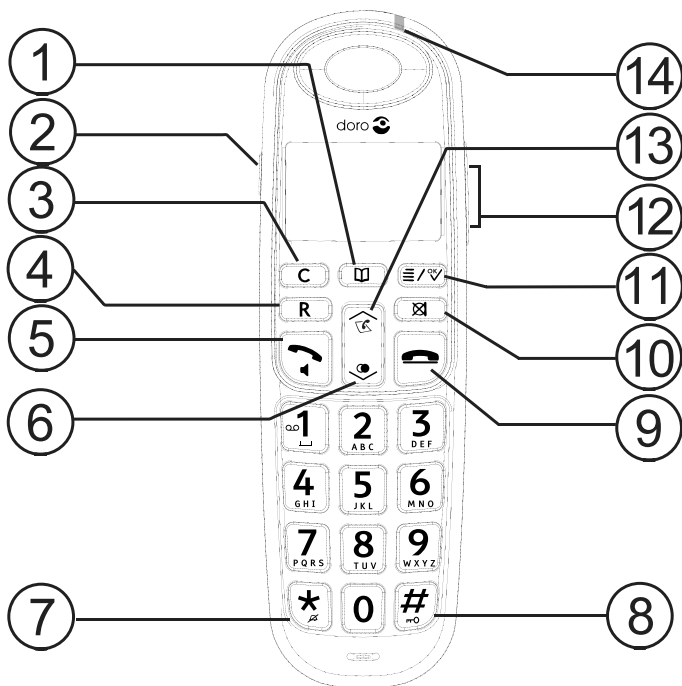

PhoneEasy 115

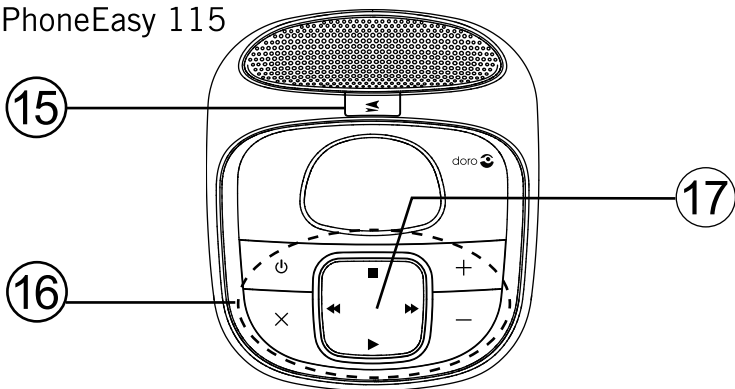

English

- | | |
|-------------------------------------|---------------------------------|
| 1. Phonebook | 10. Mute |
| 2. Boost (sound amplification) | 11. Menu key/OK |
| 3. Intercom | 12. Volume |
| 4. Recall key | 13. Call log/Up |
| 5. Call key/Speaker phone | 14. Ringer LED |
| 6. Redial/Down | 15. Paging |
| 7. Ringer on and off | 16. Answering machine functions |
| 8. Keypad lock and unlock | 17. Touch screen/base display |
| 9. End call / Switch on/off handset | |

Contents

 

Installation	1
Connection	1
Basic setup	1
Operation	3
Making a call	3
Receiving a call	3
Redial	3
Speaker mode	4
Mute	4
Call timer	4
Entering text	4
Keypad lock	4
Paging	5
Handset power On/Off	5
Silent/Ringer off	5
Volume control	5
Boost (sound amplification)	5
Phonebook	6
Storing contacts	6
Dialling from the phonebook	6
Edit contacts	6
Copy contacts to another handset	7
Deleting contacts	7
Capacity	7
Edit group	7
Speed dial	8
Call log (Caller ID)	8
Retrieving and dialling	9
Deleting from call log	9
Caller identification messages	10

Sound	10
Ringer.....	10
Tones	11
Settings.....	11
Handset settings.....	11
Base settings.....	12
Expanded system (two or more handsets)	13
Answering machine.....	15
Setup from handset.....	15
Use from handset	16
Use from base unit	18
Out of memory.....	19
Remote access	19
Others	20
Range	20
Eco Functionality	20
Battery	21
Hearing loop.....	21
Troubleshooting	21
Care and maintenance.....	22
Warranty	23
Specific Absorption Rate (SAR)	24
Declaration of Conformity	24

Installation

This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE.

Connection














1. Connect the mains adapter to an electrical wall socket and to  on the base.
2. Connect the telephone line cord to a network wall socket and to  on the base.
3. Insert the batteries 2 x 1.2 V NiMH AAA into the handset in accordance with the markings.
4. Place the handset in the base to charge (24 hours the first time).

Note!

Use the telephone line cord supplied, an existing line cord from a previous phone may not be compatible.

Basic setup























 

 
 
Language

1. Press  .
2. Scroll   to **Settings**. Press  .
3. Scroll to **Handset settings**. Press  .
4. Scroll to **Language**. Press  .
5. Scroll to **English**. Press  .
6. Press  to exit the menu.

Note!

See [Sound/Tones , p.11](#) on how to change language for **Talking keys**.









 





Date/Time/Alarm







1. Press  .
2. Scroll   to **Settings**. Press  .
3. Scroll to **Date/Time/Alarm**. Press  .
4. Scroll to **Date / Time**. Press  .
5. Select **Time format** and press  . Select **24 hour** or **12 hour**. Press  .
6. Select **Date format** and press  . Select **dd/mm** or **mm/dd** and press  .
7. Select **Enter time** and press  .
8. Enter current time. Press  .
9. Scroll to **Enter date**. Press  .
10. Enter current date. Press  .

Note!

If the PhoneEasy 115 base unit's display is showing – – the answer machine is disconnected, or time/date is not set. You need to set the correct date and time to gain full functionality.

Alarm

1. Press  .
2. Scroll   to **Settings**. Press  .
3. Press  , scroll to **Date/Time/Alarm** and press  .
4. Scroll to **Alarm**. Press  .
5. Select **On** to activate an alarm (select **Off** to deactivate it). Press  .



6. Enter the alarm time. Press  .
7. Scroll to **Ringtone** . Press  .
8. Press  .

Note!




When the alarm goes off, **ALARM** is displayed. Turn off the signal with any key. The volume is determined by the handset ringer volume. If the handset **Ringervolume** is set to **Off**, the alarm still sounds at **Level 1**.

Operation

Making a call

1. Enter the required number. Delete with **C**.
2. Press  to make the call. Press  to end the call.







Receiving a call

1. Press  to answer. Press  again to answer in speaker mode.
2. Press  to end the call.



Note!

If auto answer is enabled, the call is answered when you pick up the handset from the base. See [Handset settings, p.11](#).

Redial

Press . Scroll among the 10 most recently dialled numbers with  . If the number is already in the phonebook, the corresponding name will also be displayed. Press  to call the displayed entry, or   for the submenu, see [Phonebook, p. 6](#) .


Speaker mode

To switch between handset/speaker press . When activated  is displayed.

Note!

Please remember that in speaker mode, it is only possible for one person at a time to talk. To save power, speaker and the display light ceases to operate at low battery strength.

Mute



Switch on/off the microphone during a call with .


Call timer

During a call the display will show a timer **HH:MM:SS**, indicating the call duration.




Entering text

Press each numerical key repeatedly until the desired character is displayed, then wait a few seconds before entering the next character.

	= space
	= switch between upper/lower case ABC/abc/Abc

Press **C** to delete. Press and hold **C** to delete the entire text string. Use  or **C** (several times) to exit the menu.




Keypad lock

Press and hold  to activate/deactivate. When activated  is displayed. Incoming calls can be answered by pressing  even if the keypad is locked. During the call, the keypad is unlocked. When the call is ended or rejected, the keypad is locked again.



Note!

The emergency numbers 999, 112 and 911 can be dialled without unlocking the keypad.



Paging

Press  on the base unit to page the handset/s. The handset/s will ring and **Paging** is displayed. The signal will stop automatically, or press  again, or press  on the handset.





Handset power On/Off

Press and hold  in standby to power on/off the handset. Press  to confirm.


Silent/Ringer off

Press and hold  in standby to turn on/off the handset ring signal, see also [Sound, p.10](#). When ringer is deactivated  is displayed.

Volume control

The handset volume may be adjusted during a call with /. Alternatively use /. The volume level is indicated on the display. When you end the call, the setting will remain at the last selected level.

Boost (sound amplification)

Press  on the side of the handset, to activate/deactivate Boost. When activated the LED indicator illuminates. Boost is deactivated at the end of each call to avoid harming people with normal hearing.

**CAUTION**

The handset volume can be very loud. Boost should only be used by persons with impaired hearing ability.

Phonebook

The phonebook will store 100 contacts. Contacts in the phonebook are arranged alphabetically. Each name can be up to 10 characters in length, and phone numbers can be up to 24 digits in length.

If you subscribe to a Caller ID service, the name/number of the caller will be displayed (for those numbers stored in the phonebook).

Storing contacts





 
 

1. Press . Press /OK/✓.
2. Scroll /☐/☐ to **New entry**. Press /OK/✓.
3. Enter name. Press /OK/✓.
4. Enter phone number. Delete with **C**. Press /OK/✓.
5. Select required **Group**. Press /OK/✓.

Dialling from the phonebook

1. Press .
2. Scroll /☐/☐ between contacts. Quick search the phonebook by pressing the corresponding number key for the first letter.
3. Press /OK/✓.
4. Scroll to **Call**. Press /OK/✓.



 




Edit contacts

1. Press .



 



-
2. Scroll   to the contact you want to edit. Press /OK.
 3. Scroll to **Edit**. Press /OK.
 4. Edit the name. Delete/backspace with **C**. Press /OK.
 5. Edit the number. Delete/backspace with **C**. Press /OK.
 6. Select the required **Group**. Press /OK.

Copy contacts to another handset

Only for expanded system, with two or more handsets.

1. Press .
2. Scroll   to the contact you want to copy. Press /OK.
3. Scroll to **Copy/Copy all**. Press /OK.
4. Select a destination handset. Press /OK.
5. **Accept PB entries?** is displayed on the destination handset.
6. Press /OK on the destination handset to confirm.

Deleting contacts






 




1. Press .
2. Scroll   to the contact you want to delete. Press /OK.
3. Scroll to **Delete/Delete all**. Press /OK.
4. Press /OK to confirm.

Capacity

Here you can check how many phonebook entries that are stored and available storage capacity.

Edit group

1. Press . Press /OK.

2. Scroll   to **Edit group**. Press  .
3. Scroll to the group you want to edit. Press  .
4. Scroll to **Rename group/Set ringtone**. Press  .
5. Make your selections and then press   to confirm.


 









Speed dial

Once a contact has been saved as **Speed dial** you only need to press one key to make a call.

Note!

The contact must be stored in the phonebook before assigning it as speed dial.

Storing as speed dial

1. Press . Press  .
2. Scroll to **Speed dial**, press  .
3. Select **Key 2–Key 9**. Press  .
4. Select a contact from the phonebook and press  .
5. The numerical key you selected is displayed again.
6. Press   for the submenu, such as **Edit** and **Delete**.

Speed dialling

To dial a speed dial contact press and hold the equivalent key (**Key 2–Key 9**) until the phone number is displayed.

Call log (Caller ID)



 



Caller ID allows you to see who is calling before you answer and to see who has called in your absence. If the number is stored in the phonebook, the caller's name will be displayed. The calls are stored in sequence. The last 20 incoming answered and unanswered calls are stored

along with the date and time. **New call/New calls** will be displayed in standby mode.

Note!

This function requires a subscription from your service provider. Contact your service provider for more information.

Retrieving and dialling




1. Press . Press /OK.
Or press /OK and select **Call log**.
2. Scroll to desired number with .
3. Press  to dial or press /OK for the submenu:



Details	View details for the call
Delete	Delete this number from the call log (not from Phonebook)
Delete all	Delete all numbers from the call log (not from Phonebook)
Call	Dial number
Store number	Store number in Phonebook
Call log type	Save information about Missed calls (unanswered) or All calls (answered and unanswered).

Note!

*As default the last 20 incoming answered and unanswered calls are stored along with the date and time of the calls. To save memory storage you can select to save only **Missed calls**.*


Deleting from call log

1. Press . Scroll to the desired entry with .
Press /OK.


2. Scroll to **Delete/Delete all** Press .
3. Press  to confirm.

Caller identification messages

The following messages will be displayed occasionally:




 
Unknown	Unknown number, e.g. international call.
Private	Information about the number is blocked. Number cannot be displayed.
	Message indication from your network operator*.





* Only functions in certain countries.

To remove the message indicator: Press  and then hold down **4**.

Sound

Ringer

1. Press . Scroll to **Sound**. Press .
2. Scroll to desired function e.g. **Ringer**. Press .
3. Scroll to desired setting. Press .

External	Select ringer for external calls. Press  .
Internal	Select ringer for internal calls. Press  .
Ringer volume	1 = lowest, 5 = highest, or Off . Press  .
Silent	Beep = handset beeps on incoming call Off = handset ringer is completely silent on incoming call. Press  .

Note!

Melody 6–Melody 10 will continue for up to 9 seconds if the call is answered in another phone. Select **Melody 1–Melody 5** if you want to avoid this.

Tones

1. Press /OK. Scroll to **Sound**. Press /OK.
2. Scroll to desired function e.g. **Tones**. Press /OK.
3. Scroll to desired setting. Press /OK:





 

Key tone	Select Key beep , Talking keys or Off . If you select Talking keys also select desired language.
Confirmation	Select On or Off . Press /OK to confirm.
Battery low	Select On or Off . Press /OK to confirm.
No coverage	Select On or Off . Press /OK to confirm.

Settings

Handset settings

1. Press /OK. Scroll to **Handset settings**. Press /OK.
2. Scroll to desired function e.g. **Language**. Press /OK.
3. Scroll to desired setting. Press /OK:





Direct call	PIN: (default code is 0000)
Select base	Only used in systems with more than one base unit.



Display	Level 1 = normal) Select Handset name = the text/name displayed in standby. Press  to confirm.
Language	The handset's menu language.
Auto answer	On = the call is answered when the handset is lifted from the base. Off = the call is answered by pressing  .
Register handset	Register a new handset to a base, see <i>Expanded system (two or more handsets), p.13</i> .
De-register	De-register a handset from a base. Enter the PIN code (default code is 0000) and press  . Press  again to confirm.
Handset reset	Reset the handset to default settings. Enter the PIN code (default code is 0000) and press  . Press  again to confirm.

 

Note!

A de-registered handset can no longer be used with the system!

Base settings

- Press . Scroll to **Base settings**. Press . Scroll to desired function e.g. **Ringer**. Press . Enter the desired setting. Press .

Ringer	Select ringtone for the base unit. Press  to confirm.
Ringer volume	Base unit's ringer volume. 1 = lowest, 5 = highest, or Off . Press  to confirm.

Flash time	Recall time. 600 ms = New Zealand 300 ms = France/Portugal 100 ms = others including UK/AUS
System PIN	Change PIN code (default code is 0000).
Base reset	Reset the base to default settings. Enter the PIN code (default code is 0000) and press  OK. Press  OK again to confirm.

Expanded system (two or more handsets)





 
The call number for internal calls will be displayed in the display in standby mode. The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.



Register a new handset

All handsets included in the package are already registered to the base unit. You can register up to 5 handsets to one base unit.

Note!



This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer. However the GAP protocol cannot guarantee that all functions may be accessed.

1. Hold down  (base unit) until indicator flashes.
2. Press OK. Scroll to **Handset settings**. Press OK.
3. Scroll to **Register handset**. Press OK.
4. Select the base unit **Base 1–Base 4** you wish to register. Press OK.

5. Enter the base unit's PIN code (default code is 0000). Press  .
6. If the registration is successful the unit will return to standby mode within one minute.



Intercom/internal call

1. Press **C**.
2. If using more than 2 handsets: Enter call number **1-5** for the desired handset or press **9** for all.

A tone will be heard if an external call comes in while an internal call is in progress. End the internal call with  and then answer the external call with .

Transferring calls/conference between handsets

When an external call is connected;

1. Press **C**.
2. If using more than 2 handsets: Enter call number **1-5** for the desired handset or press **9** for all.
3. To transfer: press 
For conference: hold  pressed down.

Answering machine

When the answering machine is switched on calls are answered after a set number of rings, your outgoing message is heard and the caller can leave a message. Total memory capacity is up to 15 minutes. Most functions can be accessed from both base unit and handset.

Setup from handset

1. Press /OK. Scroll to **Answer machine**. Press /OK.
2. Scroll to **Answer settings**. Press /OK.
3. Scroll to desired setting. Press /OK:

Answer mode	Select Answer / Record or Answer only (caller cannot leave message).
TAM language	Select language for pre-recorded outgoing message.
Answer delay	Select after how many rings (2 rings – 8 rings or Time saver) the call will be answered.
Recording time	Select maximum recording time for each message.
Call screening	On = incoming messages can be heard on the loudspeaker of the base unit as they are received.
Remote access	On = access your answering machine remotely from another phone.

Note!

The Time Saver function answers calls after approximately 6 ring signals, until the first new message has been registered - then the answering machine switches to answering after approximately 2 signals. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

Use from handset

If there are new messages, **New msg/New msgs** are displayed. Playback always starts with new messages.

1. Press /OK. Scroll to **Answer machine**. Press /OK.
2. Scroll to **Playback**. Press /OK.
3. During playback the following commands are available:

	Delete current message
	Skip to previous
	Stop playback
	Skip forward
	Speaker OFF/ON
	Volume control (side keys)

On/Off

1. Press /OK. Scroll to **Answer machine**. Press /OK.
2. Scroll to **Answer On/Off**. Press /OK.
3. Scroll to desired setting. Press /OK.

Note!

Even when answering machine is OFF it will still answer after 10 rings, see [Remote access, p.19](#).

Outgoing message

The outgoing message (max 3 minutes) is heard by incoming callers. There are two separate outgoing messages, one for **Answer only** (callers cannot leave a message) and one for normal answering function **Answer / Record**. Please also select desired answer mode **Answer mode**. See [Setup from handset](#).

1. Press . Scroll to **Answer machine**. Press .
2. Scroll to **Outgoing message**. Press .
3. Scroll to **Record message**. Press .
4. Scroll to **Answer / Record** or **Answer only**. Press .
5. After the long beep you can record your message (speak 20 cm from the handset). Press to end recording.
6. The message will be played back to you.
7. Press .

IMPORTANT!


Do not press or **C** during playback. The message is not saved until the message has been played back to you.

Note!





*A pre-recorded message is used until you make your own recording, and that message can also be restored if required. To restore this, press **C** during playback of outgoing message.*

Delete all old messages


1. Press . Scroll to **Answer machine**. Press .
2. Scroll to **Delete messages**. Press .

3. Confirm with .



Personal message (MEMO)

1. Press . Scroll to **Answer machine**. Press .
2. Scroll to **Record MEMO**. Press .
3. After the long beep you can record your message (speak 20 cm from the handset). Press  to end recording.
4. The message will be played back to you.
5. Memos are played back in the same way as ordinary incoming messages.

IMPORTANT!




Do not press  or **C** during playback. The message is not saved until the message has been played back to you.

Screening

Incoming messages will be heard on the loudspeaker of the base unit as they are received. If nothing can be heard, check that the volume is turned up and that the function has been activated, see [Setup from handset](#). You can also press  on the handset while recording is in progress. The call can be intercepted by pressing  or lifting the receiver of another telephone connected to the same line.

Use from base unit

The digits on base unit will flash when there are new messages (01-59 messages).

	switch the answering machine on/off.
	Start playback
	Stop playback

◀◀ / ▶▶	Skip to previous/Skip forward
X	Delete current message. To delete all old messages after playback: Press and hold X until you hear a beep.
+/-	Increase/decrease the volume

Note!

If the base unit display is showing – – the answer machine is disconnected, or time/date is not set. You need to set the date and time to gain full functionality.

Out of memory

The memory has room for up to 59 messages (including the outgoing message) max. 15 minutes. When **TAM full** is displayed or the base unit flashes **FF**, no new messages can be recorded until the old ones have been played back and deleted. In that case, the telephone answering machine responds with the outgoing message for Answer Only.

Note!

Remember to delete messages regularly!

Remote access

The answering machine can be remotely accessed using an ordinary tone dialling telephone.

1. Call the answering machine (the number that your answering machine is connected to, usually your home number).
2. Press ***** when the outgoing message is played.
3. Enter the PIN code (default code is 0000).
4. Select remote access command(s):

2	Delete current message
4	Press once to repeat current message. Press twice to skip to previous message.
5	Playback of messages. (During playback 5 is used to stop playback)
6	Skip forward
7	Turn the answering machine ON
9	Turn the answering machine OFF

Note!

Using a PIN code prevents other people from accessing your machine without permission. For security reasons, it is recommended that you change the PIN code from the default setting of 0000. See [Base settings, p.12](#).

Others

Range

The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted.

Eco Functionality

We have introduced the ECO FUNCTIONALITY label to help customers identify products within our assortment having a lower impact on the environment. Products carrying this label feature:

- Reduced power consumption in both operational and standby mode.
- Adaptive transmission power depending on range on base unit.




Battery



CAUTION

Risk of explosion if battery is replaced by an incorrect type. Use only original batteries. The use of non-original batteries may be dangerous and may invalidate the phone's guarantee.

When the batteries are relatively new they will last for approximately 100 hours standby time or approximately 10 hours call time. Full battery capacity will not be reached until the batteries have been charged 4–5 times. It is not possible to overcharge or damage the batteries by charging them for too long. It may take up to 10 minutes charging before display illuminates, if batteries are totally empty.

When the batteries are running low,  will flash and a warning tone will be heard when a call is in progress. The warning tone is optional, see [Tones](#), p.11. The battery charge indicator  in the display will flash as long as the handset is charging. In order to save the batteries, the display is very dark on standby, press  once to illuminate. When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line. Do not place the base unit close to other electrical equipment, this is to minimize the risk of any interference. It is normal for the device to become warm during charging and this is not dangerous.

Hearing loop

The handset has a built-in hearing loop for those who wish to use their hearing aid with this telephone. Select **T**-mode on your hearing aid to enable the feature.

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment. Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please report this to your network operator.

No number shown when ringing

- This function requires a Caller ID subscription from your service provider.

Warning tone/Not possible to make calls

- The batteries may be running low (charge the handset).
- The hand unit may be nearly out of range. Move closer to a base unit.

Telephone does not work

- Check that the adapter/phone cord is connected correctly.
- Check the charge status of the handset batteries.
- Connect another functioning telephone to the network wall socket.

The telephone continues to ring

- Some of the telephone's ringers do not follow the line signal, which means that the signal may continue for up to 8 seconds after answering a call. Try changing ring signal.

The answering machine does not respond to remote access

- Check that you are using a tone dial telephone.
- Try holding the buttons down longer, approximately 1 second per digit.

The answering machine is not answering

- Memory may be full. Delete old messages.
- Check that the adapter/phone cord is connected correctly.
- Check that the answering machine function is turned on.

If the telephone still does not work, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Care and maintenance

Your unit is a technically advanced product and should be treated with the greatest care. Negligence may void the warranty.

- Protect the unit from moisture. Rain/snowfall, moisture and all types of liquid can contain substances that corrode the electronic circuits. If the unit gets wet, you should remove the battery and allow the unit to dry completely before you replace it.
- Do not use or keep the unit in dusty, dirty environments. The unit's moving parts and electronic components can be damaged.
- Do not keep the unit in warm places. High temperatures can reduce the lifespan for electronic equipment, damage batteries and distort or melt certain plastics.
- Do not keep the unit in cold places. When the unit warms up to normal temperature, condensation can form on the inside which can damage the electronic circuits.
- Do not try to open the unit in any other way than that which is indicated here.
- Do not drop the unit. Do not knock or shake it either. If it is treated roughly the circuits and precision mechanics can be broken.
- Do not use strong chemicals to clean the unit.
- The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible.

The advice above applies to the unit, battery and other accessories. If the telephone is not working as it should, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty

This product is guaranteed for a period of 12 months from the date of purchase. In the unlikely event of a fault occurring during this period, please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period.

This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the charger during a thunderstorm.

Batteries are consumables and are not included in any guarantee.

This guarantee does not apply if other batteries than DORO original batteries have been used.

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. PhoneEasy 115 measures 0.035 W/kg measured over 10 g tissue.

The maximum limit according to WHO is 2.0 W/kg measured over 10 g tissue.

Declaration of Conformity

Doro hereby declares that PhoneEasy 115 conforms to the essential requirements and other relevant regulations contained in the Directives 1999/5/EC (R&TTE) and 2002/95/EC (RoHS). A copy of the Declaration of Conformity is available at www.doro.com/dofc

Doro PhoneEasy® 115

Doro PhoneEasy® 115 duo

Doro PhoneEasy® 115 trio

Doro PhoneEasy® 115 quad

English

Version 1.0

© 2011 Doro AB. All rights reserved.

www.doro.com



REV 2867 — STR 20110831-2